













ZN50QT-11

	Nr.	photo	
1	50QT-11-000001		up axletree groupware
2	50QT-11-000002		down axletree groupware
3	50QT-11-000003		compaction nut
4	50QT-11-000004		lock tighten set
5	50QT-11-000005		hang frame axes I
6	50QT-11-000006		hang frame axes II
7	50QT-11-000100		seat gasket groupware
8	50QT-11-000201		back armrest
9	50QT-11-000202		decorated board ,back armrest
10	50QT-11-000203		rear armrest decorated piece

11	50QT-11-000204		rear armrest light
12	50QT-11-000200A		carrier plate
13	50QT-11-000301		l/r rearview mirror
14	50QT-11-000302		r/r rearview mirror
15	50QT-11-010001		Fr wheel Axle
16	50QT-11-010002		fr wheel bush
17	50QT-11-010003.1		the front of the Fr wheel fender
18	50QT-11-010003.2		the front of the Rr wheel fender
19	50QT-11-010004		front wheel fender bracket
20	50QT-11-010101		Stem comp handle
21	50QT-11-010102		Fr cushion Assy, L
22	50QT-11-010103		Fr cushion Assy, R

23	50QT-11-010102A		Fr cushion Assy,L
24	50QT-11-010103A		Fr cushion Assy,R
25	50QT-11-010201		Fr wheel panel2.5-10
26	50QT-11-010202		vavle mouth
27	50QT-11-010203		vacuum tire 3.00-10
28	50QT-11-010203A		vacuum tire 3.50-10
29	50QT-11-010301		fr disc brake pump
30	50QT-11-010302		Fr brake plkate
31	50QT-11-010303		Dis brake srew
32	50QT-11-010400		driver

33	50QT-11-020101		l hand glove
34	50QT-11-020102		l switch combination
35	50QT-11-020103		Steering comp handle
36	50QT-11-020104		throttle cable
37	50QT-11-020105		rr trig line
38	50QT-11-020106		r switch combination
39	50QT-11-020107		accelerograph turing hand
40	50QT-11-020201		speedometer cover
41	50QT-11-020202		Speedometer assy










42	50QT-11-020203		Speedometer cable
43	50QT-11-020301		windshield
44	50QT-11-020302		headlight groupware
45	50QT-11-030001		Key Set Comp.
46	50QT-11-030002		Single support bolt
47	50QT-11-030003		Single support haul spring
48	50QT-11-030004		hanger rubber sheath
49	50QT-11-030005		bracket, fuel tank
50	50QT-11-030006		seat lock fixing board

51	50QT-11-030100		Frame Body
52	50QT-11-030200		Bracket horn
53	50QT-11-030300		Single support
54	50QT-11-030400		Hanger
55	50QT-11-030501		Left guard piece bracket
56	50QT-11-030502		Right guard piece bracket
57	50QT-11-030600		seat lock bracket assy
58	50QT-11-040100		engine
59	50QT-11-040201		Rr tire steel ring
60	50QT-11-040300		Rr brake shoe

61	50QT-11-040401		muffler
62	50QT-11-040402		vent-pipe
63	50QT-11-040403		vent-pipe heat insulation ma
64	50QT-11-040404		muffler block hoop
65	50QT-11-040405		muffler block hoop rubber ma
66	50QT-11-040500		Rr cushion
67	50QT-11-040500A		Rr cushion
68	50QT-11-040601		air cleaner assy
69	50QT-11-040602		second-buring filter
70	50QT-11-040700		carburetor

71	50QT-11-040801		Rr wheel fender frame
	50QT-11-040802		Rr wheel fender
	50QT-11-040803		rear wheel fender fixing pad
72	50QT-11-040900		stand assy, main
73	50QT-11-041000		connect board
74	50QT-11-040001		arm collar, Rr wheel
75	50QT-11-040002		sewing arm, Rr brake
76	50QT-11-040003		air colander enterwindpipe
77	50QT-11-040004		ventilate pipe groupware










78	50QT-11-040005		Washer
79	50QT-11-040006		main stand axle
80	50QT-11-040007		spring, main stand
81	50QT-11-040008		rubber, main stand
82	50QT-11-040009		hanger assembling bush
83	50QT-11-050001		frame fender
84	50QT-11-050002		l protect piece
85	50QT-11-050003		r protect piece
86	50QT-11-050004		Floor step
87	50QT-11-050005		rear protect piece










88	50QT-11-050006		Luggage box
89	50QT-11-050007		lower cap, luggage box
90	50QT-11-050008		Battery box
91	50QT-11-050009		Cover, battery
92	50QT-11-050010		safety helmet pothook glue bail
93	50QT-11-050011		Rubber, floorstep
94	50QT-11-050012		blokk water rubber skin
95	50QT-11-050100		front cover
96	50QT-11-050201		front board

97	50QT-11-050202		Winker cop L, Fr
98	50QT-11-050203		Winker cop R, Fr
99	50QT-11-050204		fr postion light
100	50QT-11-050301		Fr cover luggage
101	50QT-11-050302		motorcycle safety helmet pothook B
102	50QT-11-050303		safety helmet pothook glue bail
103	50QT-11-050401		Plate comp plastec,L
104	50QT-11-050402		Plate comp plastec,R
105	50QT-11-050403		Rr middle plastic,plate

106	50QT-11-050501		trail board
107	50QT-11-050502		license plate frame
108	50QT-11-050503		L/R sides reflect implement
109	50QT-11-050504		Rr reflector
110	50QT-11-050600		Tail light assy.
111	50QT-11-050701		Upper, tool box
112	50QT-11-050702		Down, tool box
113	50QT-11-050703		Cover frame number
114	50QT-11-050704		motorcycle safety helmet pothook A

115	50QT-11-060100		oil box
116	50QT-11-060101		oil digit sensor
117	50QT-11-060102		sensor press board
118	50QT-11-060103		sensor airproof circle
119	50QT-11-060104		Switch of burnout
120	50QT-11-060105		filter
121	50QT-11-060001		gasoline pipe
122	50QT-11-060002		block spring
123	50QT-11-060003		pressure pipe

124	50QT-11-060004		fuel omiting underlay
125	50QT-11-060005		fuel omiting hose
126	50QT-11-070001		Wire Harness
127	50QT-11-070002		CDI comp lgnition
128	50QT-11-070003		Winker comp Relay
129	50QT-11-070004		Regulator
130	50QT-11-070005		“-” cable
131	50QT-11-070006		“+” cable
132	50QT-11-070007		Resistance

133	50QT-11-070100		Starting comp Relay
134	50QT-11-070200		ignition loop
135	50QT-11-070300		Horn
136	50QT-11-070400		Battery
137	50QT-11-070500		wire harness, sub
138	50QT-11-080000		whole stanard piece
139	50QT-11-090010		wrap
140	50QT-11-090020		tool with motorcycle
141	50QT-11-090030		whole set stickers

142	50QT-11-090040		aluminum plate
143	50QT-11-090050		antitamper plate
144	50QT-11-090060		rear box (optional)
145	50QT-11-090070		remote control(optional)
146	50QT-11-090080		remote control pressure board (optional)
147	50QT-11-090090		kill switch (optional)
148	50QT-11-090100		carbon tin